


Steering and Autopilot Diagram

HIN: OEY370630887

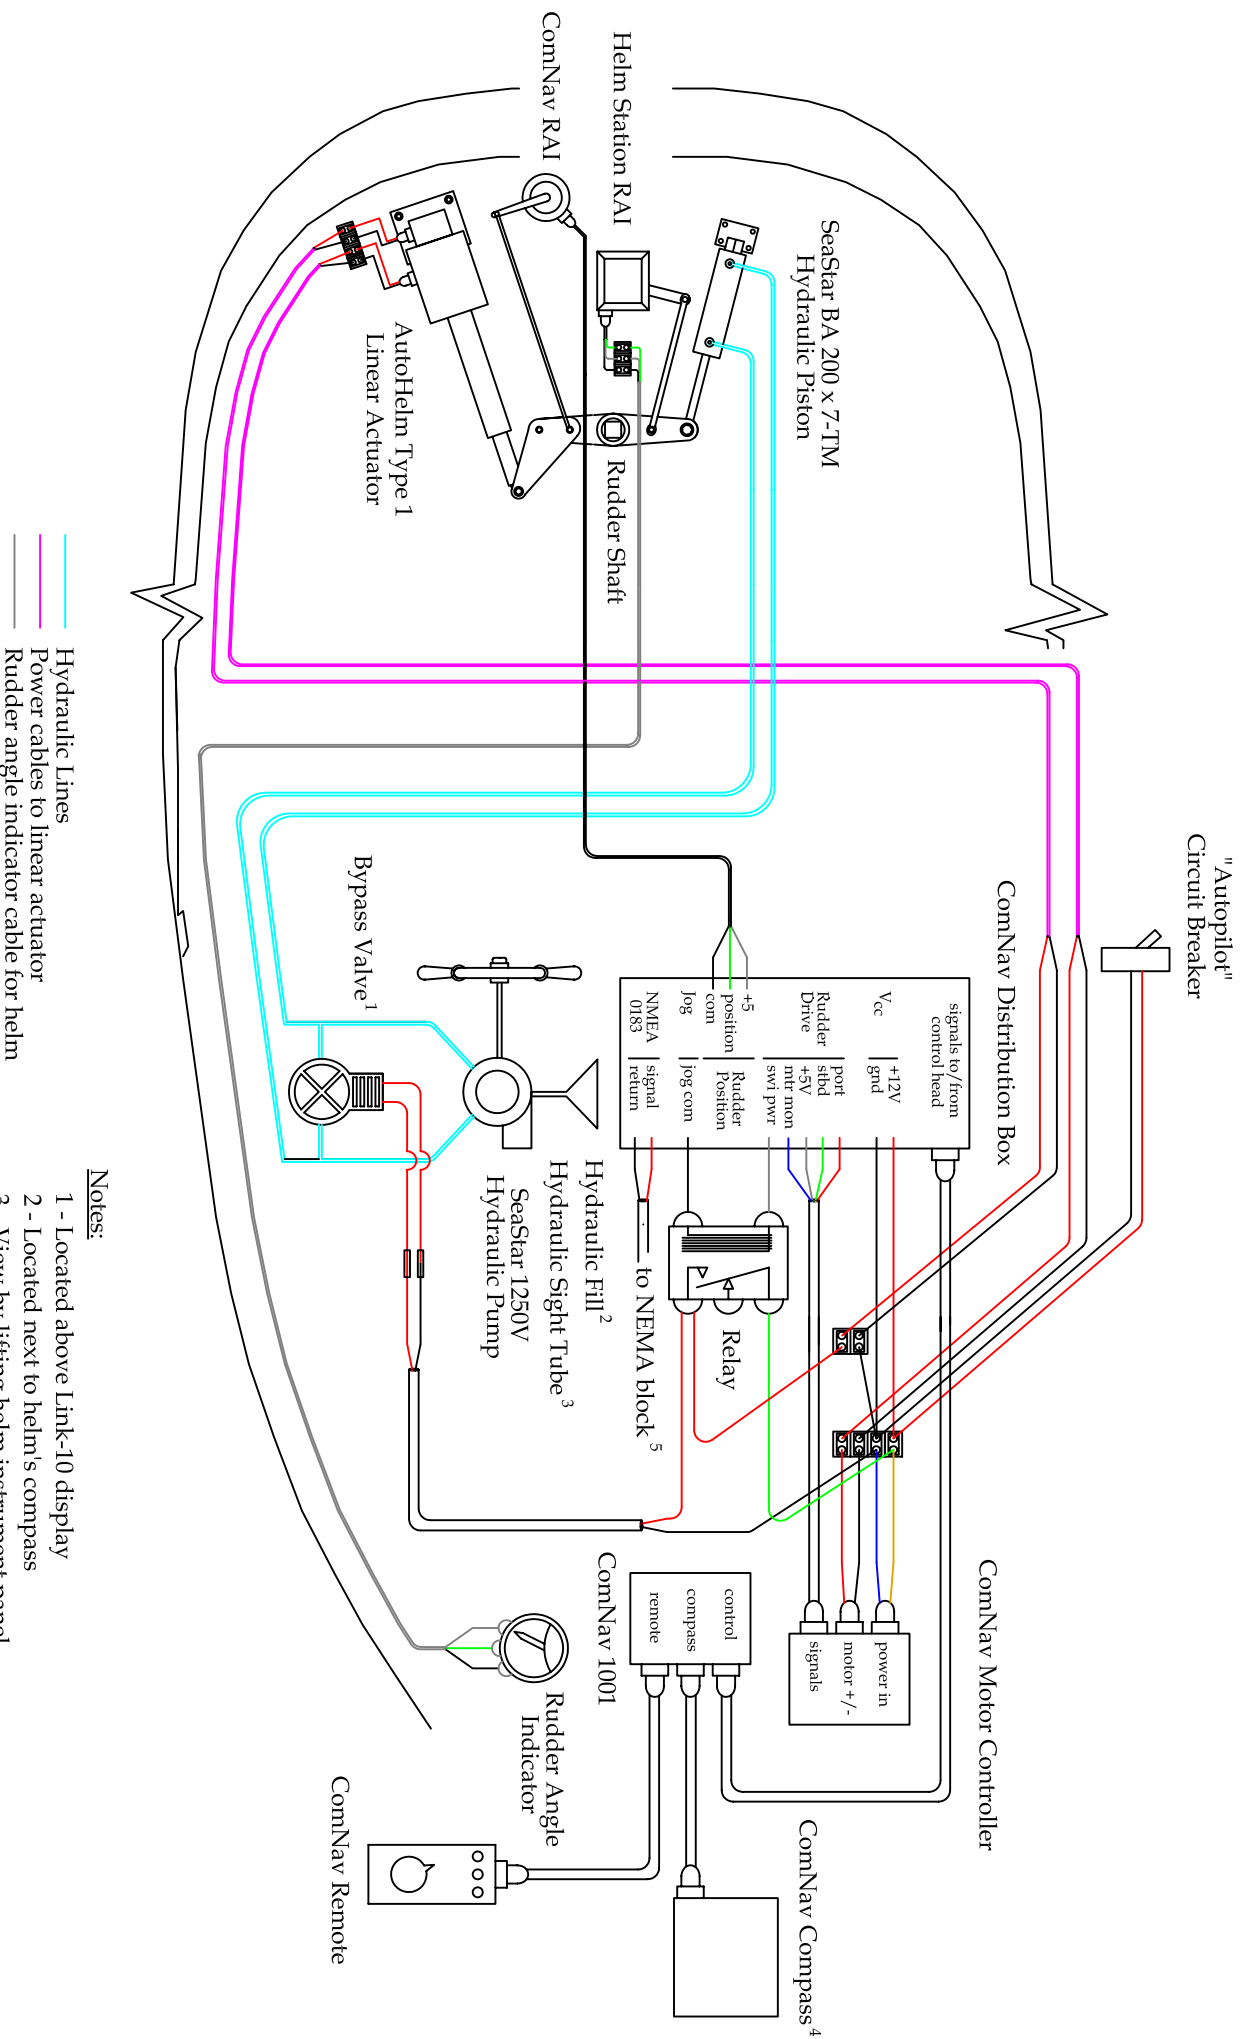

Notes:

- 1 - Located above Link-10 display
- 2 - Located next to helm's compass
- 3 - View by lifting helm instrument panel
- 4 - Located under bottom drawer of dressing table
- 5 - See Nav Panel Wiring Diagram